USER'S GUIDE

V:0959-0117-11

ISP591B

App-enhanced Speaker System for iPod + iPhone

For the most up-to-date version of this User's Guide, go to **www.ilive.net**

Warnings and Precautions

- **CAUTION**: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- **AVERTISSEMENT:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- **CAUTION:** Use of any controls or adjustments or performance of procedures other than those herein specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- ***PRÉCAUTION:*** *Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.*
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- **WARNING:** The battery, batteries, and battery pack shall not be exposed to excessive heat such as sunshine, fire, or the like.
- **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.
- **WARNING**: Shock hazard - Do Not Open.
- ***AVIS****: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR*

  Mains Plug or Direct plug-in adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the Mains Plug or Direct plug-in adapter should be disconnected from the mains socket outlet completely.

  La fiche d'alimentation ou adaptateur de courant est utilisé comme dispositif de déconnexion et doit rester accessible pendant l'utilisation. Pour mettre l'appareil hors tension, la fiche ou adaptateur de courant doit être débranché de la prise de courant.

  Do not mix old and new batteries.
  Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
  No mezcle baterías viejas y nuevas.
  No mezcle baterías alcalinas, estándar (carbono-zinc) o recargables (ni-cad, ni-mh, etc.).

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Important Safety Instructions

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Special note: When placing your unit on a lacquered or natural finish, protect your furniture with a cloth or other protective material.

FCC Warnings

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
  L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
  Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- Caution marking is located at the rear or back of the apparatus.
  Attention marquage est situé à l'arrière ou à l'arrière de l'appareil
- The marking information is located at the rear or back of apparatus.
  Les informations de marquage est situé à l'arrière ou à l'arrière de l'appareil.

This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

App-enhanced Speaker System for iPod + iPhone

Features

- Play and charge iPod & iPhone
- App-enhanced: clock, alarm, weather, nature sounds, photo slideshow with background music, and line in mode
- Auto time sync with iPod and iPhone
- Rotating dock for viewing iPod and iPhone in portrait or landscape modes
- High-power amplifier
- Dynamic stereo speakers
- Audio input (3.5mm)
- Video output (composite)
- Remote control
- AC/DC adapter

Included

- Remote control: requires a CR2025 battery (pre-installed)
- 2 spacers
- AC/DC power adapter

Table of Contents

App-enhanced Speaker System for iPod + iPhone 4
Features
Included

Table of Contents. 5

Introduction 6

Setup 8
Power
Backup Battery
Remote

iPod and iPhone. 9
Connecting the Spacers
Docking an iPod or iPhone
Rotating Dock
Playing a Docked iPod or iPhone

ISP591 App Overview. 10
Automatically Downloading the App
ISP591 App
Manually Downloading the App

3.5mm Audio Input and Composite Video Output 11
Using the 3.5mm Audio Input
Using the Composite Video Output

Company Information 12
International Support
Contact Information
Green Initiative

Introduction

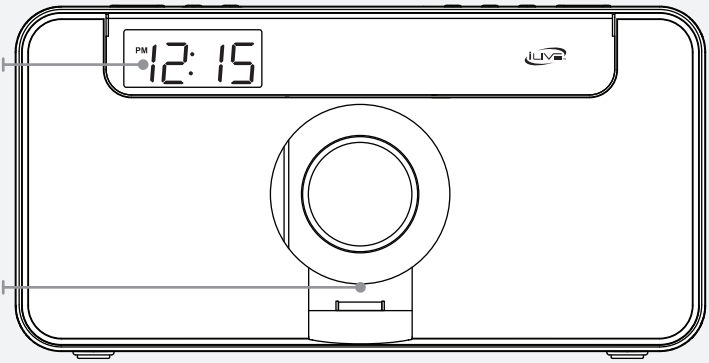

DISPLAY

ROTATING DOCK FOR iPod and iPhone

VOLUME
Press to adjust the volume.

POWER/PLAY/PAUSE
Press to power on the speaker. Press and hold to power off the speaker. When powered on, press to play or pause a docked iPod or iPhone.

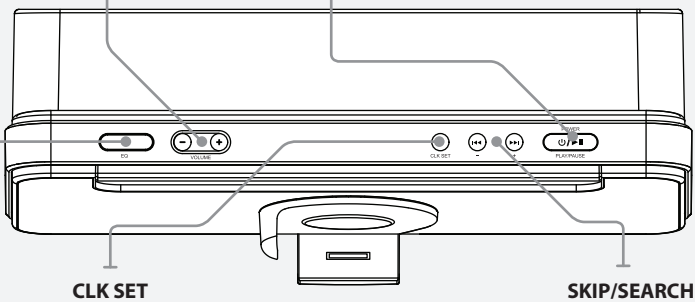

EQ
Press to switch between Rock, Classic, Jazz, and Pop preset equalizer modes.

CLK SET
With the power off, press and hold to begin setting the clock.

SKIP/SEARCH
Press to skip between tracks on a docked iPod or iPhone. Press and hold to search through an individual track. Press to adjust the time when setting the clock.

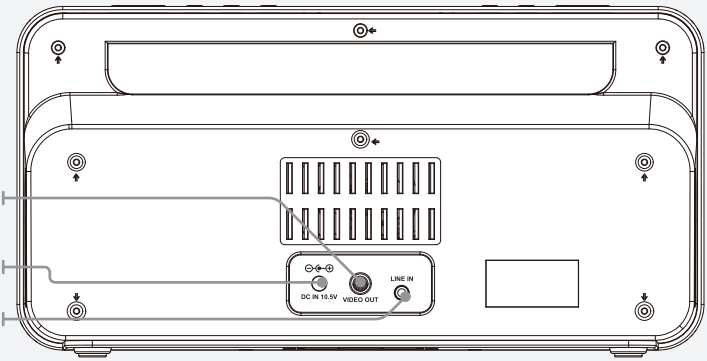

COMPOSITE VIDEO OUTPUT

DC POWER INPUT

3.5mm AUDIO INPUT

POWER/PLAY/PAUSE
Press to power on the speaker. Press and hold to power off the speaker. When powered on, press to play or pause a docked iPod or iPhone.

MUTE
Press to mute the volume.

EQ
Press to switch between Rock, Classic, Jazz, and Pop preset equalizer modes.

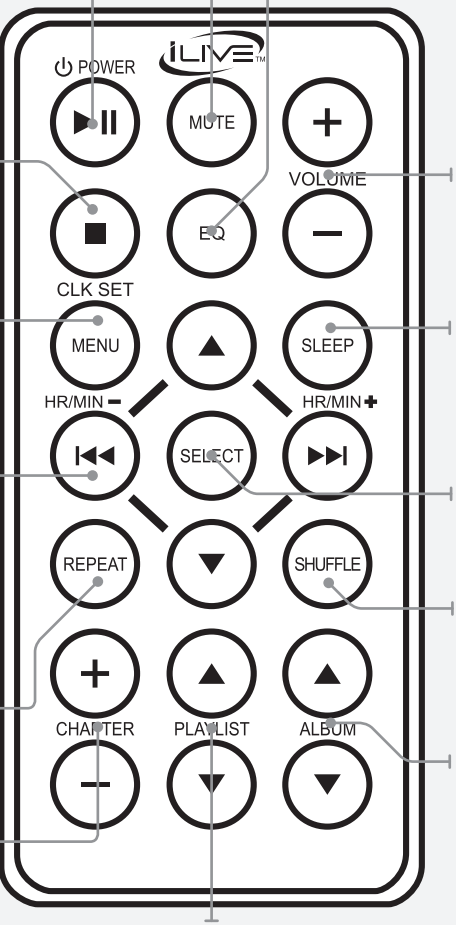

STOP
Press to stop a docked iPod or iPhone during play.

VOLUME
Press to adjust the volume.

CLK SET/MENU
With the power off, press and hold to begin setting the clock. Press to move through the menus on a docked iPod or iPhone.

SLEEP
Press repeatedly to set the sleep timer.

SKIP/SEARCH
Press to skip between tracks on a docked iPod or iPhone. Press and hold to search through an individual track. Press to adjust the time when setting the clock.

SELECT
Press to make selections on a docked iPod or iPhone.

SHUFFLE
Press to activate or deactivate the shuffle mode on the docked iPod or iPhone.

REPEAT
Press to cycle through repeat options on a docked iPod or iPhone.

ALBUM
Press to switch between albums on a docked iPod or iPhone.

CHAPTER
Press to switch between chapters on a docked iPod or iPhone.

PLAYLIST
Press to switch between playlists on a docked iPod or iPhone.

Setup

Power

DC power input: requires an AC/DC power adapter (included)

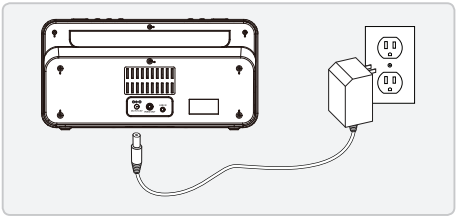

Backup Battery

Backup battery: requires 2 AAA batteries (not included)

The backup battery will save the set time in case of an unexpected power outage.

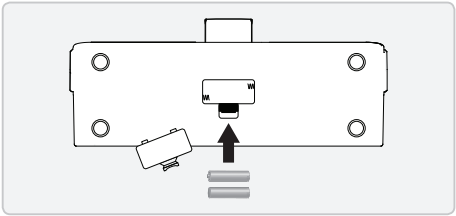

Remote

Requires a CR2025 battery (pre-installed)

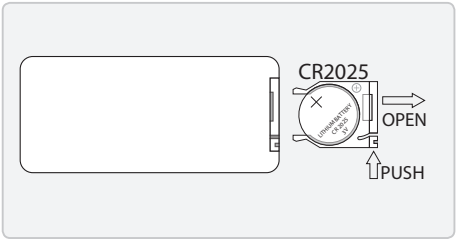

WARNING: The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste.

iPod and iPhone

Connecting the Spacers

1. Place the spacer onto the dock and turn clockwise to lock the spacer into place.
2. To remove the spacer, turn counter-clockwise.

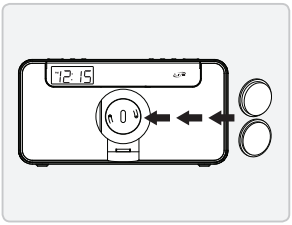

CLOCKWISE

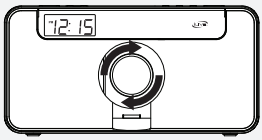

LOCKS

COUNTER-CLOCKWISE

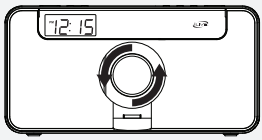

UNLOCKS

Docking an iPod or iPhone

1. Follow the instructions for Connecting the Spacers and use as needed to fit your iPod or iPhone into the dock.
2. Connect the iPod or iPhone to the connector on the **ROTATING DOCK FOR iPod and iPhone**.
3. When the speaker is plugged in, using AC power, the docked iPod or iPhone will charge.

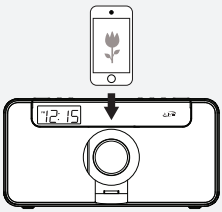

Playing a Docked iPod or iPhone

1. Follow the instructions for Docking an iPod or iPhone.
2. Press the **POWER** button to turn the speaker on.
3. Press the **POWER/PLAY/PAUSE** button to begin playing the docked iPod or iPhone.

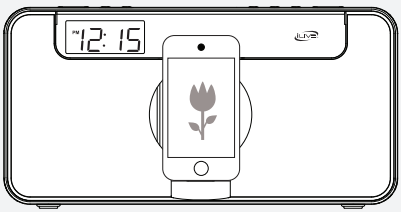

Rotating Dock

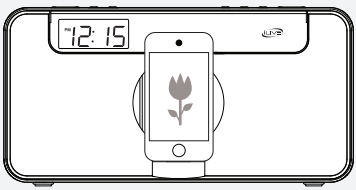

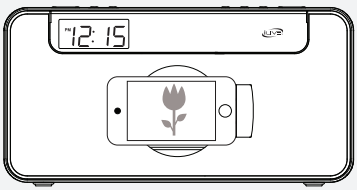

ISP591 App Overview

Automatically Downloading the App

1. Follow the instructions for Docking an iPod or iPhone.
2. Once the iPod or iPhone is docked a screen will appear prompting you to download the ISP591 app from the App Store.
3. Press **Yes** to automatically download the ISP591 app.

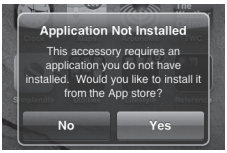
Application Not Installed
This accessory requires an application you do not have installed. Would you like to install it from the App store?
No
Yes

Manually Downloading the App

1. Go to the App Store on your iPhone or iPod touch.
2. Search for ISP591.
3. Download the App.

ISP591 App

CLOCK
The clock will automatically sync with the time on the iPod or iPhone, so there's no need to set it.

ALARM
Add as many alarms as you like. You can set them to wake to iPod music, Nature Sounds, Buzzer, or you can record your own alarm.

WEATHER
Type in your location and view your current weather conditions along with the time on the home page of the app.

PHOTO SLIDE SHOW
Select photos that are already on your iPod or iPhone and play a slideshow with your music in the background.

SOURCES
When docked with the App-enhanced Speaker System (ISP591) you can use the app to control the source on the speaker system.

Choose **iPod** to play music directly from your iPod or iPhone or **Line In** to play music from an audio source connected to the 3.5mm audio input on the speaker system.

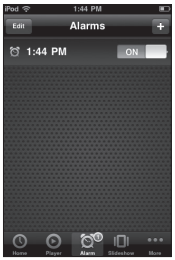

3.5mm Audio Input and Composite Video Output

Using the 3.5mm Audio Input

Requires a 3.5mm audio cable (not included)

1. Disconnect any iPod that is docked to the **ROTATING DOCK FOR iPod and iPhone**.

   The speaker system will automatically switch to Line In mode when a 3.5mm audio cable is connected to the 3.5mm AUDIO INPUT as long as there isn't an iPod docked in the ROTATING DOCK FOR iPod and iPhone. An iPhone can remain docked.

   If you have downloaded the ISP591 App you can use it to switch to Line In mode while an iPod touch or iPhone is docked.

2. Connect a 3.5mm audio cable to the **3.5mm AUDIO INPUT** on the speaker and an audio output on an MP3 player or other audio source.

3. Use the native controls on the connected MP3 player or other audio source to play and control audio played through the speaker.

Using the Composite Video Output

Requires an RCA composite video cable (not included)

1. Connect the RCA composite video cable to the **COMPOSITE VIDEO OUTPUT** on the speaker and a composite video input on a television.

2. Adjust the **TV OUT** settings on the docked iPod to **OK**.

3. Videos played from the docked iPod or iPhone will now play on the connected television.

   Photo slideshows played through the ISP591 App cannot be output using the Composite Video Output.

Company Information

International Support

To download this User's Guide in English, Spanish, or French, visit the support section at www.ilive.net.

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en www.ilive.net.

Pour télécharger ce guide de l'utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez www.ilive.net.

Contact Information

Phone: 1-888-999-4215
Email: customerservice@ilive.net
Parts Email: partsinfo@dpiinc.com
Website: www.ilive.net

Green Initiative

Environmental Commitment to 'Protect for Today and Sustain for Tomorrow'

2009 marked the official launch of DPI, Inc.'s corporate campaign for a greener and cleaner world. DPI is building upon environmental initiatives introduced at all of their facilities to help formulate and sustain significant and important conservation efforts within its manufacturing and marketing communities. In addition to targeting and selecting energy efficient product features, and structuring 'green office' procedures, other initial program efforts include:

- Reduction of all packaging sizes
- Recyclable plastics for clamshell packages, with a plan to eventually replace plastic with recyclable paper
- Recycled fiber board in place of the polyfoam in packing boxes
- Recycled plastics in place of the virgin material in product construction

Copyright © 2010 Digital Products International (DPI, Inc.) | All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice